



**The Model 1000-ANL will not operate without a load connected between signal out and ground terminal.**

**Do not remove factory installed jumper until ready to connect to Analog Loop.**