

# Badger® ORION® Reading System (ORS)

## Procedure for Quick Read



For 24 hour Hardware, Software, and Procedure Support, call: 1-800-456-5023. Technician Hours are 7:45 a.m. – 4:30 p.m. Central Time, Mon.-Fri. Emergency Technician Paging 4:30 p.m. - 7:45 a.m. Central Time Mon.-Fri., Weekends, and Holidays.

### Single Serial Number Quick Read

- A. Start the Badger ORION Reading Software.
- B. Verify the receiver unit is connected, turned on, and the receiver antenna is in place.
- C. Select the **Quick Read** button.
- D. Enter the Transmitter ID number you want to attempt to read.
- E. Select the **Start** button.
- F. Badger ORION will display a read while in range of the transmitter. The last 10 readings collected will remain on the screen.
- G. When done reading, select the **Stop** button.
- H. Select the **Close** button to exit to the main menu.

# Badger® ORION® Reading System (ORS)

## Procedure for Quick Read



For 24 hour Hardware, Software, and Procedure Support, call: 1-800-456-5023. Technician Hours are 7:45 a.m. – 4:30 p.m. Central Time, Mon.-Fri. Emergency Technician Paging 4:30 p.m. - 7:45 a.m. Central Time Mon.-Fri., Weekends, and Holidays.

### Single Serial Number Quick Read

- A. Start the Badger ORION Reading Software.
- B. Verify the receiver unit is connected, turned on, and the receiver antenna is in place.
- C. Select the **Quick Read** button.
- D. Enter the Transmitter ID number you want to attempt to read.
- E. Select the **Start** button.
- F. Badger ORION will display a read while in range of the transmitter. The last 10 readings collected will remain on the screen.
- G. When done reading, select the **Stop** button.
- H. Select the **Close** button to exit to the main menu.

# Badger® ORION® Reading System (ORS)

## Procedure for Quick Read



For 24 hour Hardware, Software, and Procedure Support, call: 1-800-456-5023. Technician Hours are 7:45 a.m. – 4:30 p.m. Central Time, Mon.-Fri. Emergency Technician Paging 4:30 p.m. - 7:45 a.m. Central Time Mon.-Fri., Weekends, and Holidays.

### Single Serial Number Quick Read

- A. Start the Badger ORION Reading Software.
- B. Verify the receiver unit is connected, turned on, and the receiver antenna is in place.
- C. Select the **Quick Read** button.
- D. Enter the Transmitter ID number you want to attempt to read.
- E. Select the **Start** button.
- F. Badger ORION will display a read while in range of the transmitter. The last 10 readings collected will remain on the screen.
- G. When done reading, select the **Stop** button.
- H. Select the **Close** button to exit to the main menu.

### Wildcard Quick Read

- A. Start the Badger® ORION® Reading Software.
- B. Verify the receiver unit is connected, turned on, and the receiver antenna is in place.
- C. Select the **Quick Read** button.
- D. Select the **Clear ID** button.
- E. Select the **Start** button.
- F. The readings will be displayed for any transmitters that are within range.
- G. When done reading, select the **Stop** button.
- H. Select the **Close** button to exit to the main menu.

### Wildcard Quick Read

- A. Start the Badger® ORION® Reading Software.
- B. Verify the receiver unit is connected, turned on, and the receiver antenna is in place.
- C. Select the **Quick Read** button.
- D. Select the **Clear ID** button.
- E. Select the **Start** button.
- F. The readings will be displayed for any transmitters that are within range.
- G. When done reading, select the **Stop** button.
- H. Select the **Close** button to exit to the main menu.

### Wildcard Quick Read

- A. Start the Badger® ORION® Reading Software.
- B. Verify the receiver unit is connected, turned on, and the receiver antenna is in place.
- C. Select the **Quick Read** button.
- D. Select the **Clear ID** button.
- E. Select the **Start** button.
- F. The readings will be displayed for any transmitters that are within range.
- G. When done reading, select the **Stop** button.
- H. Select the **Close** button to exit to the main menu.