


PC-100 WITH START BUTTON DISABLE DURING BATCH

APPLICATION BRIEF

WIRING DIAGRAM

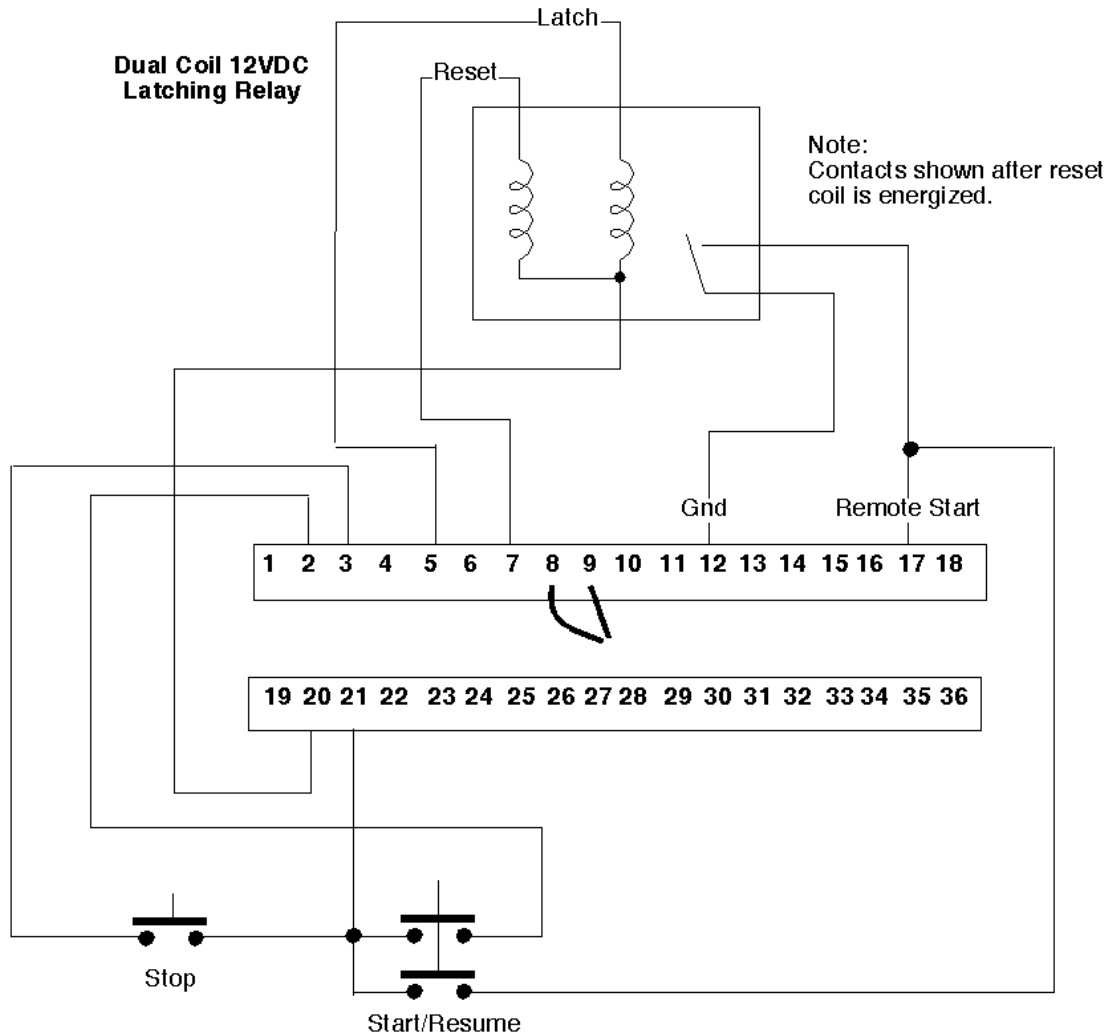

Notes:
 Program Function 33 for "1"
 Program Function 36 for "99"
 Program Function 10 for "1"

Front panel start button will be disabled after batch is started.
 It will remain disabled until batch is completed.

Latch coil is energized for duration of batch when start button is pressed.
 Reset coil is momentarily energized when batch count reaches zero.
 Start button is disabled when ground is applied to terminal 17.



BadgerMeter, Inc.

P. O. Box 245036 Milwaukee, WI 53224-9536
 Telephone: (414) 355-0400
 Fax: (414) 355-7499