PC-100 WITH FRONT PANEL START SWITCH LOCKOUT

WIRING DIAGRAM

APPLICATION BRIEF

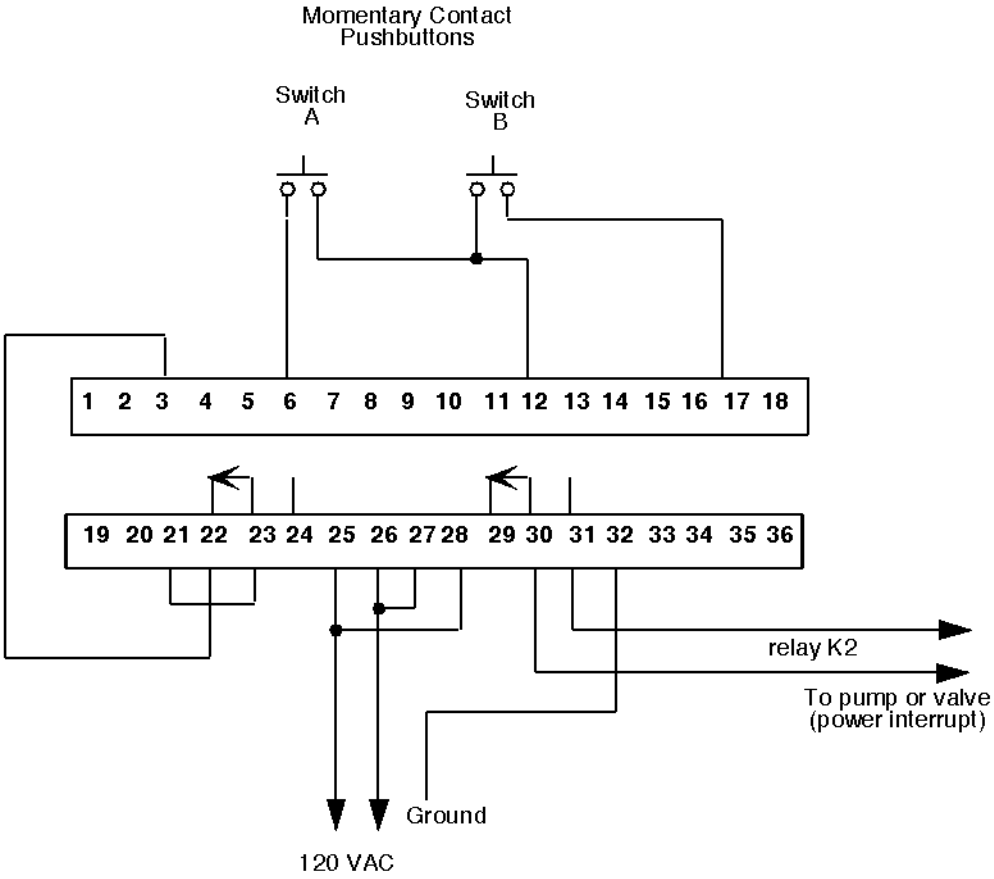

Notes:

1. Move relay coil wire from terminal 8 to terminal 6.
2. To activate remote start: Hold down switch A , press switch B, release both.

BadgerMeter,Inc.
P. O. Box 245036 Milwaukee, WI 53224-9536
Telephone: (414) 355-0400
Fax: (414) 355-7499